


CF500 Embalming Work Cell

The base of the unit is a 14 gauge plate of steel that easily installs on a counter top as shallow as 18"

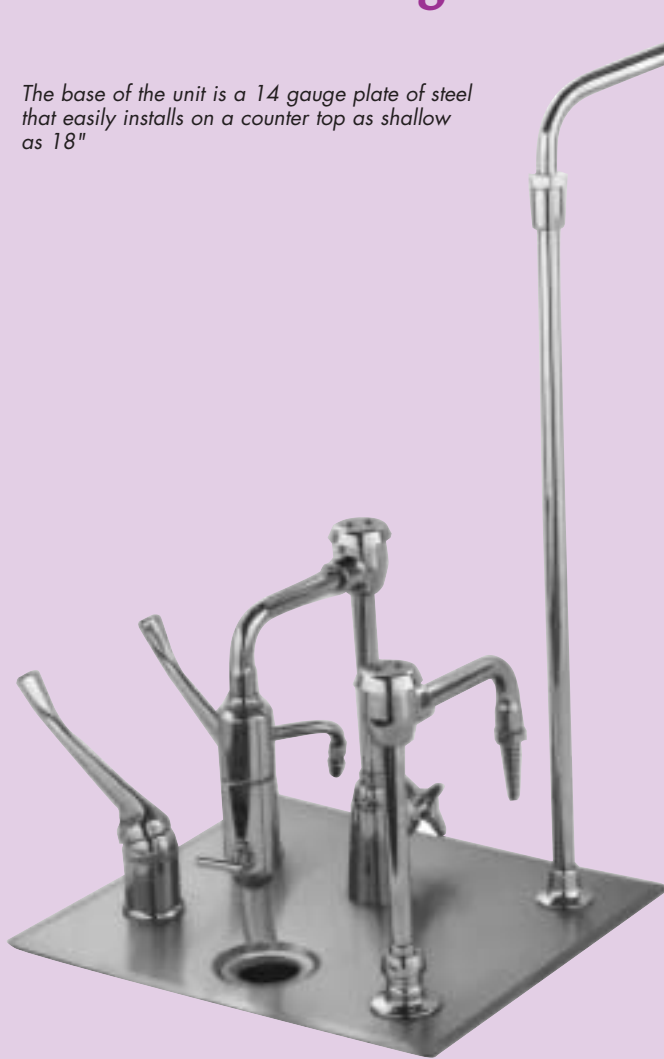

CF500 Embalming Work Cell

Filler Spout: This unit features an elevated filler spout tall enough to fit over the tank of any embalming machine. The spout is easily swiveled as needed.


Table Rinsing: Ample water supply is provided to the table for convenient washing or rinsing. This feature includes a quick connect hose attachment.

Hot & Cold Water: Factory equipped with a faucet control for hot and cold water.

Hydro-Aspirator: The water control system includes an aspirator with a built in preventive backflow mechanism to prevent any contamination from occurring to the water supply. The clear, open sight drain is another aid in preventing contamination since the air gap prevents aspirated material from returning into the system. The open sight drain is located in front of the unit, which makes it much easier to identify waste material. The aspirator also has its own faucet which controls the aspiration water.

Ready to Install: The water control system is preassembled and preplumbed and will simply drop into a cutout in your countertop.

Product No. CF500

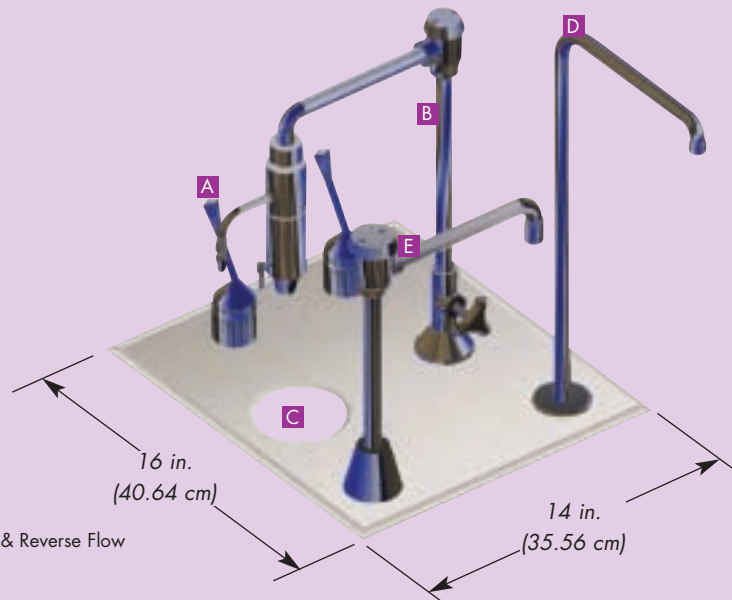

STANDARD FEATURES:

- A** Hot/Cold Mixing Valve (2)
- B** Water Fixture with Swing Spout & Reverse Flow
- C** Drain for Fluids
- D** Ball Spout (Hot/Cold)
- E** Water Fixture w/Swing Spout (Hot/Cold)